

POWERFLEX®

PART NUMBER

PFF27-901

DESCRIPTION

Front Trailing Arm Front Bush

INSTALLATION GUIDE

Product description:

This part replaces OEM part number C2D6343

Contents (parts per pack):

- 2 x A bushes
- 4 x B bushes
- 2 x stainless steel sleeves
- 1 x grease



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:


1. Remove the front bush from the front trailing arm.
2. Clean any dirt/rust from the bore of the arm. File away the sharp edges from the bore. Fig A
3. Insert the new 'A' bush into the inner side bore of the arm by applying some washing-up liquid to help the bush slide through easily. Push bush all the way through till it is locked in properly. Fig B.
4. Apply some of the supplied grease to the bore of bush A.
5. Insert 'B' bushes into both sides of 'A' bush. Apply some of the supplied grease to the bore of the bush and insert the sleeve into the bush. Fig C.
6. Re-fit the rear trailing arm to the car and tension all hardware to manufacturers recommended torque settings.



Fig A



Fig B

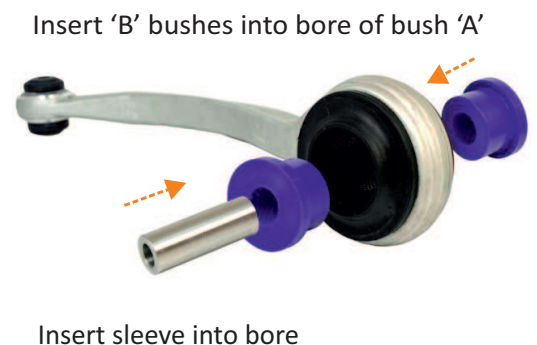

Insert 'B' bushes into bore of bush 'A'

Insert sleeve into bore

Fig C