



PART NUMBER
PFR42-603

DESCRIPTION
Front Wishbone Rear Bush

INSTALLATION GUIDE

Product description:

This part replaces OEM part number RBX100581

Contents (parts per pack):

- 2 x bushes
- 2 x stainless steel sleeves
- 1 x grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove the rear bush from the front wishbone.
2. Insert the bush A into the bracket from the rear side of the bracket and Insert the bush B into the bracket from the front side of the bracket Fig A.
3. Apply some of the supplied grease to the bore of the bush and insert the sleeve into the bush. Fig B.
4. Use the original washers on the outside surfaces of both bushes before fitting the bracket back on the wishbone.
5. Re-fit the front wishbone to the car and tension all hardware to manufacturers recommended torque settings.

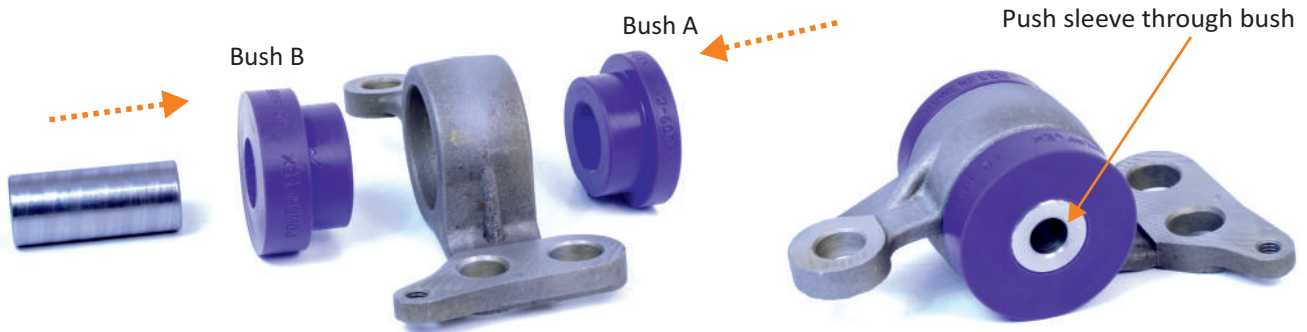


Fig A

Fig B