



## Installing a Dump valve to a Smart car



Forge dump valve kit as supplied



Loosen the clamps securing the intercooler pipe



Remove the pipe




Remove the Hose from the hard pipe



Fit new "T" piece and valve and fit vacuum hose to valve




Fix "T" to Vacuum Hose

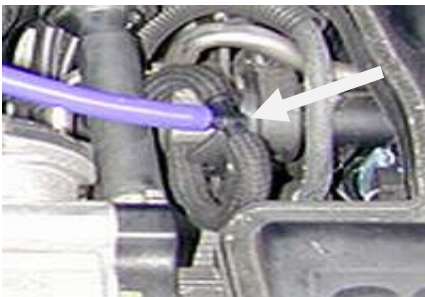

Insert "T" into vacuum line that leads to the fuel regulator



With the Valve installed tighten all clamps and secure the vacuum hose with the tie wraps supplied.

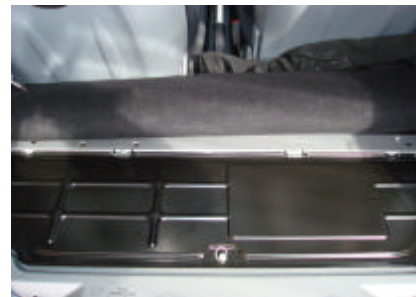

After checking that all tools have been removed replace the engine cover